

ergotron®

moving you forward

StyleView SV40 Documentation Medical Cart

- Maneuver the cart anywhere—StyleView quickly responds to caregivers' touch and enables nurses to focus on their patients
- Truly ergonomic design accommodates the largest range of nurses and other caregivers
- Adjusts for sitting or standing with a single motion to promote caregiver wellness and productivity
- StyleView's small footprint with casters travels easily across crowded carpet or hard surface floors and is perfect for space constrained areas
- Design accommodates most laptops—even widescreen—easing future hardware deployments and upgrades
- Passes Ergotron's 10,000-cycle motion test, which ensures a minimum of five years trouble-free sit-to-stand height adjustment



SV40 LAPTOP CART

FLEXIBLE DOCUMENTATION CART

STYLEVIEW™

Choose the StyleView medical cart that best meets your caregiving needs, style and workflow. Our StyleView carts include all the features that caregivers ask for, with the open architecture and quality construction that IT departments require.

Innovative documentation cart for the point of care

Non-powered with add-on power options available

Two choices of display mounts

Truly ergonomic design

Lightweight cart with a small footprint

Customize with storage and accessories

Ships fully assembled

STYLEVIEW™

PRODUCTS INCLUDE:

LCD Pivot*, worksurface, secure CPU compartment, scanner holder bracket, mouse holder, wrist rest, negative-tilt keyboard tray, left/right mouse tray, cable storage, four casters without bearings (two locking)

*Laptop version does not include an LCD Pivot

- 1 LCD Pivot offers an additional 5" (13 cm) of independent adjustment, for a total of 25" (64 cm). Note: Portrait screen orientation may not work for widescreen displays > 19"
- 2 Scanner holder bracket for convenient scanner access
- 3 Spacious worksurface: 22.4"W x 19.75"D (56.7W x 50.2D cm); Storage compartment for closed notebook, thin client or CPU: 17.75"W x 14.75"D x 4"H (45 x 37.5 x 10.1 cm)
- 4 Negative-tilt keyboard tray, wrist rest and mouse mouse tray for comfortable typing; LCD version offers additional keyboard tray movement
- 5 T-slot channel interface on the column allows you to integrate accessories; Larger computers can mount to rear of cart with Universal CPU Holder accessory (#80-105-064 ordered separately)
- 6 Four 4" (10.2 cm) standard casters with no bearings; two front casters are lockable
- 7 Wheel-to-wheel base dimensions: 17"x 21" (43 x 53.3 cm)

SEVERAL STORAGE OPTIONS AND ACCESSORIES AVAILABLE:



SV FRONT TRAY




SV SANI-WIPES HOLDER



SV TASK LIGHT



SV STORAGE BIN

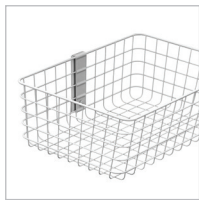

SV WIRE BASKET, LARGE



LIFEKINNEX™ POWER SYSTEM

Additional accessories available at healthcare.ergotron.com.

Uw dealer in Nederland:



Poly Temp Scientific
De Marne 211
8701 MH Bolsward
+31 (0)515 575 105
info@polytemp.com

Download additional resources at ergotron.com.

For more information:

USA & Canada: 800.888.8458 / +1.651.681.7600 / insidesales@ergotron.com

EMEA: +31.33.45.45.600 / info.eu@ergotron.com

APAC: apaccustomerservice@ergotron.com

LATAM Sales: Mexico / +1.800.681.1820 / info.latam@ergotron.com

Custom: custom@ergotron.com

© Ergotron, Inc. 03.30.2022

Literature made in the U.S.A.

Content subject to change.

Ergotron devices are not intended to cure, treat, mitigate or prevent any disease.

Patent information available at www.ergotron.com/patents.

WorkFit, StyleView, LearnFit, Neo-Flex, PowerShuttle, LiFeKinnex, CareFit and eKinnex are trademarks of Ergotron.

	Laptop	LCD Pivot
Part # (white)	SV40-6100-0	SV40-6300-0
Screen size	≤ 17"	≤ 24"
Weight Capacity*	18 lbs (8.2 kg)	35 lbs (15.9 kg)
Lift*	20" (51 cm)	25" (63.5 cm)
Adjustable Screen Mount	—	5" (13 cm)
Tilt	—	25°
Pan	—	24°
Rotation*	—	90°
VESA	—	MIS-D
Cart Weight	52.5 lbs (23.8 kg)	59.7 lbs (27.1 kg)
Shipping Dimensions	53.2"D x 24.2"W x 31.5"H (133 x 62 x 80 cm)	
Shipping Weight	72 lbs (32.7 kg)	79.8 lbs (36.2 kg)
Warranty	5-year warranty for mechanical components; 1-year warranty for electrical components	

*See website for details

